 








How to get around the DigiMemo

  The Parts of the Digital Pad

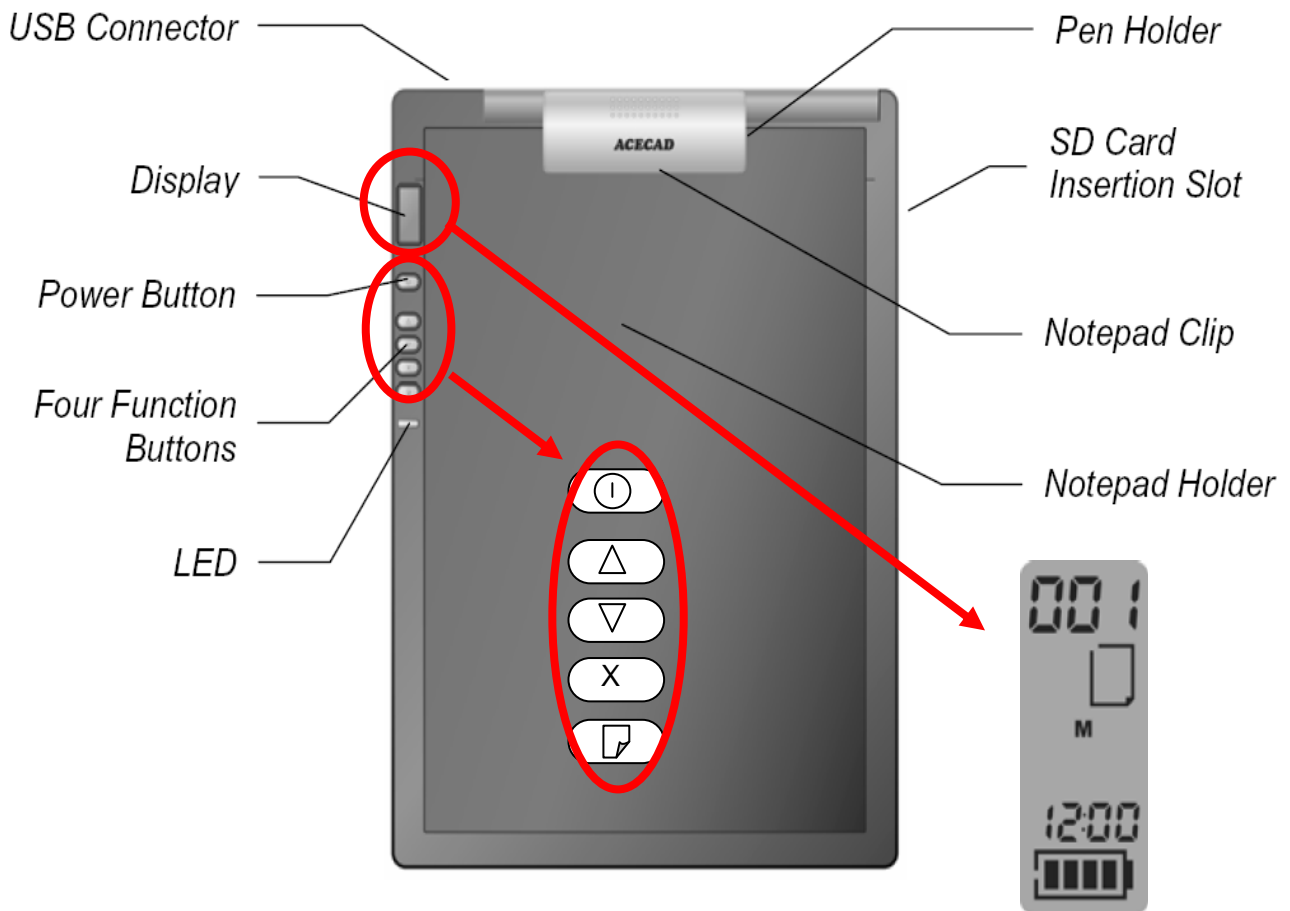

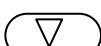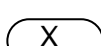
-  Power
-  Previous page
-  Next page
-  Delete page
-  New page

Turn on the digital Pad


Press and hold the **Power** button on the digital pad until the  icon appears on the display. Release the **Power** button to turn on the pad.

The display will be on and show the

 
Digital Page Number,

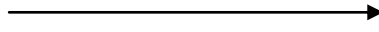

Page icon,

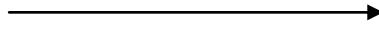 


Storage Device icon,

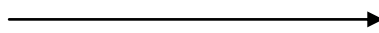 


Time display and



 Battery icon.

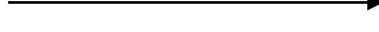

The Pen Icon

When you are writing or drawing on paper by using the digital pen on the digital pad, the **Pen** icon appears on the display. The **Pen** icon indicates that the digital pad is capturing and storing your handwriting as digital ink. 

Note! If you do not see the **Pen** icon while writing, try to alter the pressure you apply on the pen tip.

Getting Started

If there are no pages previously stored on the digital pad you will normally see page number one displayed.

Writing Your Notes

1. Put the paper onto page holder of the digital pad
2. Write the page number displayed on the digital pad on your paper
3. Write your notes onto the page ensuring the pen icon is displayed throughout your writing

Writing to a New Page

1. Press the 'Next Page' or 'New Page' button to insert a new page into the digital pad.
2. Follow steps for 'Writing Your Notes'

Writing Your Notes on a Page Already with Contents

1. Align the page you wish to edit on the holder of the digital pad
2. Press the previous/next page buttons on the digital pad to match the number of the page on the holder
3. Write on the page

Erasing a Digital Page on the Digital Pad

Here is a brief recommendation: you may want to tear off the paper page or simply cross out the page number you wrote on the paper page.

1. Press the previous/next page buttons to navigate to the digital pad page you want to delete
2. Press the 'Erase' button on the pad
3. The display will show a message. When message appears, the erase procedure will be cancelled if you write or press any button, or to execute other functions. All contents remain intact in the digital page.

Note * do not press the erase button again at this stage unless you want all pages in the digital pad to be deleted.

Note!* Once a digital page is erased, its original contents can not be recovered.

Turning off the Digital Pad

Press the **Power** button to turn off the digital pad. The display will be blank. If you have not written or pressed any function button within the previous 30 minutes, the digital pad sounds a beep and automatically shuts down. The display will be blank.

Note! Since the pad has the automatic shutdown capability, please make sure that the display is on if you want to write again after a long period of time.

As you turn on the digital pad, the display will show the last **Digital Page Number** at the time it was turned off.