

# Disgo Point and Shoot Digital Camcorder



## Turn on Camera

- 1 Press and hold the POWER key



If the camera is not operated within 3 minutes, the camera will automatically power off to save battery power.

## Record Video

- 1 Press the record key once to begin shooting.

The timer will start counting and the screen will be shown

- 2 Press the record button again to stop shooting.

## Playback

- 1 Press the playback key once to play the last video

During the playback, press the playback key to stop playing and return to the preview mode.

## Delete Video

- 1 Press the delete key and the red characters "Delete Video?" will show in the top screen
- 2 Press the delete key again for 5 seconds to delete the last file.


To cancel deletion press other button or do not operate for a short period.

## Connect to the Computer

- 1 Turn on the camera
- 2 Connect the USB to the computer and the other end to the top of the camera.

## Downloading files to the computer

- 1 Double click on **My Computer**
- 2 You will see **Removable Disk (E:) -**

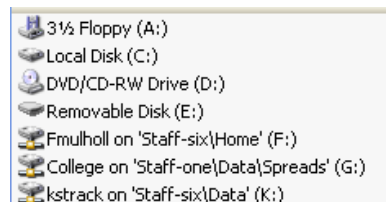

- 3 Select the video files for downloading
- 4 Copy, or drag using the mouse, the files to your computer.

**NOTE:** To avoid data loss **DO NOT** turn off the camera when video files are being copied to the computer